

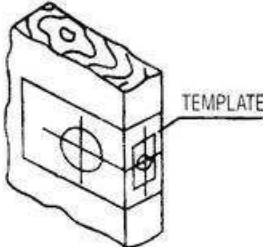
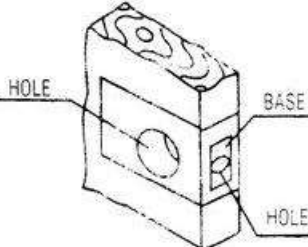
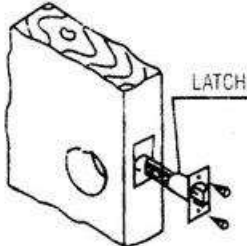
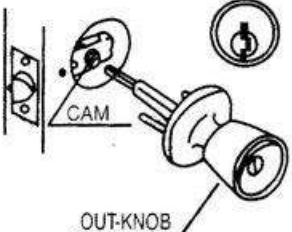
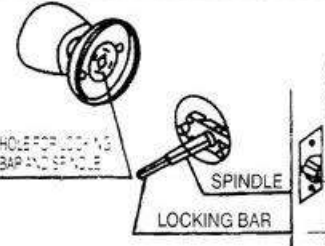
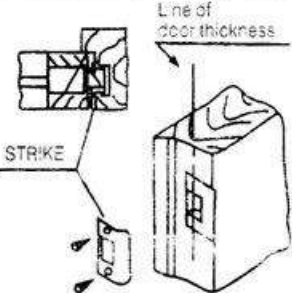

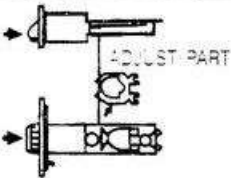


CONSTRUCTOR

WWW.CONSTRUCTORLOCKS.COM

T: (718) 499-6200; E: dsdgroup41@gmail.com

HOW TO INSTALL THIS TUBULAR LOCK

1 MARK DOOR  <p>Mark site of lock and Bore.</p>	2 BORE HOLES  <p>• Bore the holes through door • Cut out base.</p>	3 INSTALL LATCH 	4 INSTALL OUT-KNOB  <p>Key hole should be in down position</p>
5 INSTALL IN-KNOB  <p>HOLE FOR LOCKING BAR AND SPINDLE</p>	6 INSTALL STRIKE  <p>Line of door thickness</p>	INSTRUCTION FOR ADJUSTABLE LATCH  <p>The cam is pushed fully to the right for 70mm (2 3/4") backset. (During the adjustment keeping two teeth of the cam to forward always.)</p> <hr/>  <p>Push the latch inward, take off the adjust part for 70mm (2 3/4") backset.</p>	